
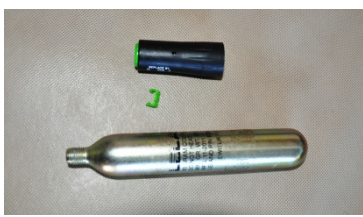


# Powerfloat Users

## Guide.

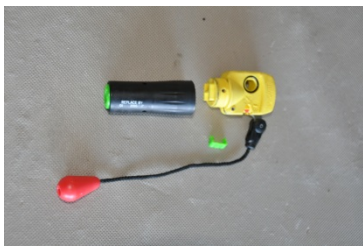

### Automatic / Manual Inflation care

1. Always check your expiry date on the Automatic inflation unit, do not wash the vest unless you remove this first.
2. When selecting a Co2 canister select a ½ inch thread unit and a minimum of 60 gram size that is available from most dealers worldwide or we can ship direct if needed.
3. Check all O rings on the inflator and where the Co2 unit screws in. a small amount of silicon grease is recommended. Secure the Co2 canister in place with the Velcro strap.

### Rearming Vest

1. This image shows an Automatic inflator that has been activated. Note Red ring on bottom of the unit and the missing green safety clip.
2. Rearming kits include a new automatic inflation unit and automatic inflation safety clip that can be easily installed when the unit is clean and dry.
3. Parts shown are the safety clip for the manual inflator, automatic screw on inflation unit and a replacement Co2 canister all available from our dealers worldwide or from us direct.